

Cordless Shade Lock / Unlock Position

Cordless Spring at the **UNLOCK** position, the shade will roll up automatically;

at the **LOCK** position, the shade will not rolled up automatically.

To switch lock / unlock position, just to pull down the shade a little bit. See the picture below.

