



# Minimum Size of the Pocket Frames: 5.75" x 6.25"

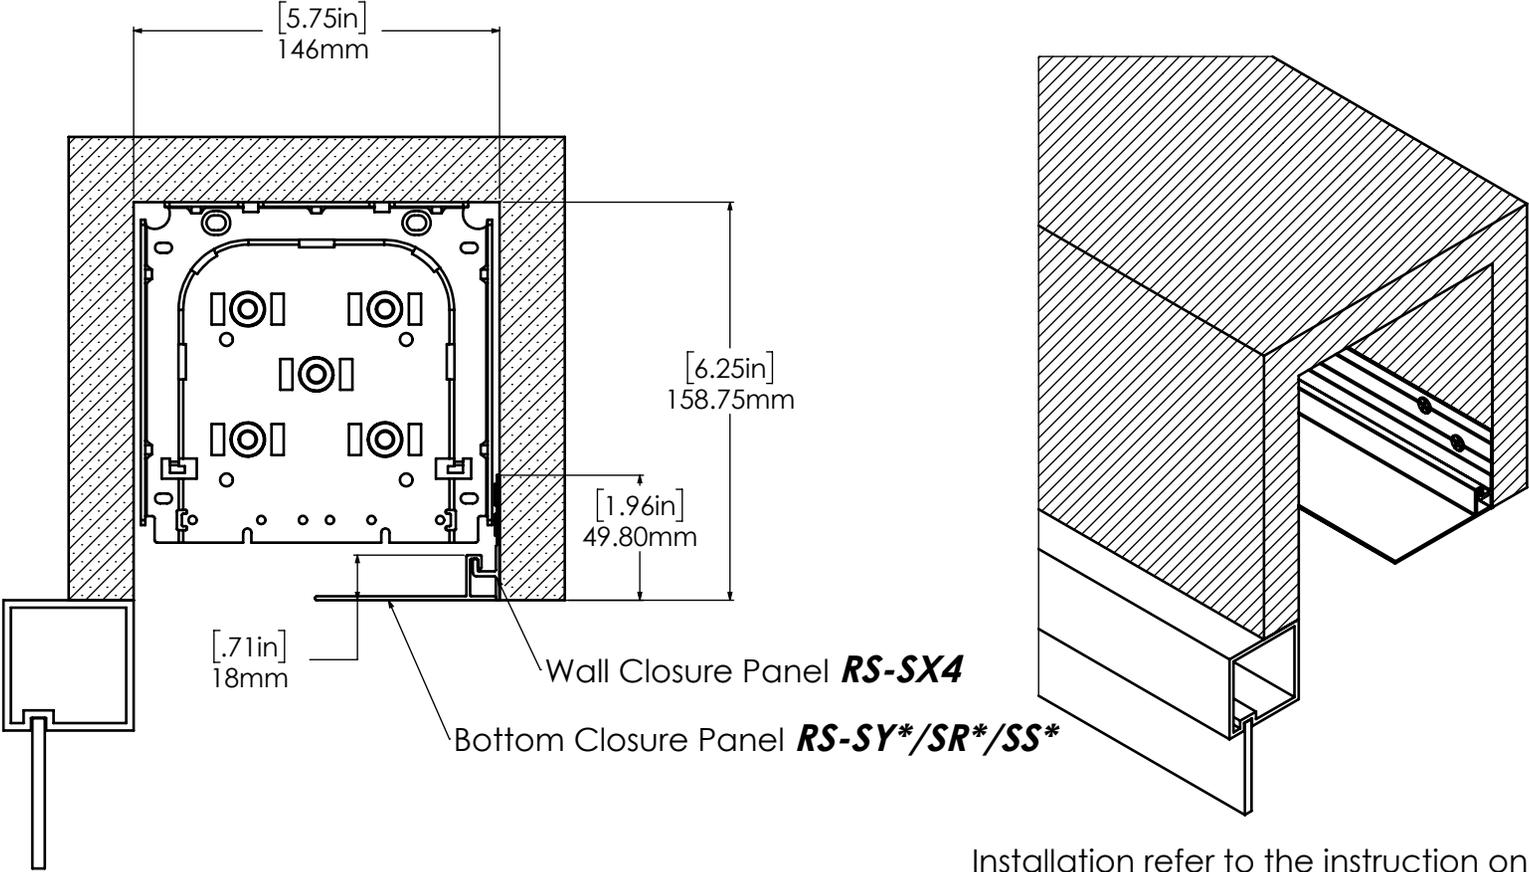


Installation refer to the instruction on next page.

# Wall Closure Panel Installation Instruction


**Step1 Option A:** pre-drill holes on Wall Closure Panel before installation.

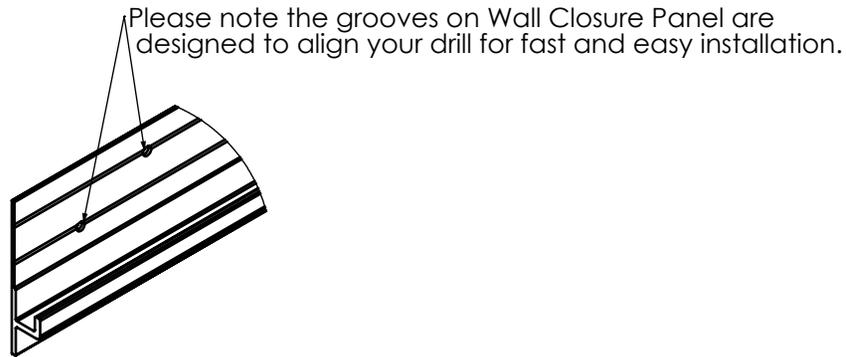

**Option B:** Drill holes at work site.

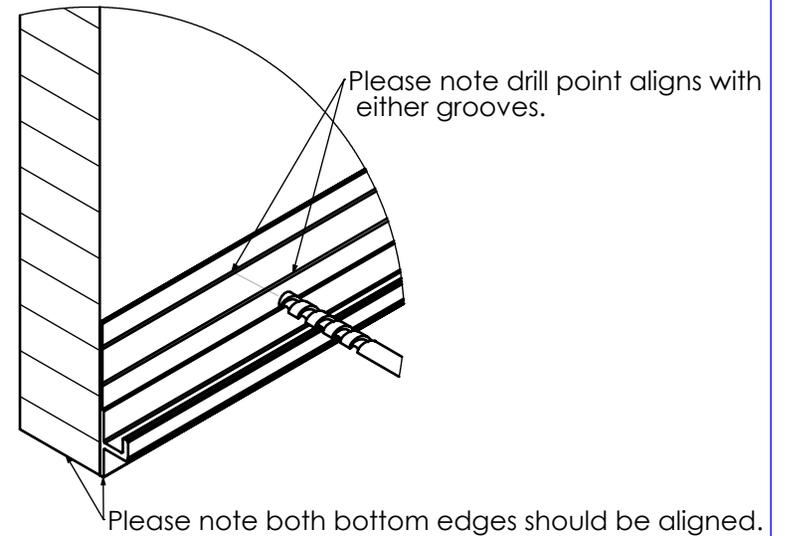

**Step2**  
Install fasteners through drilled holes on Wall Closure Panel.

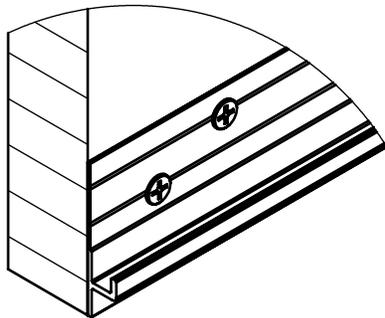

**Step3**  
Hang on Bottom Closure Panel to Wall Closure Panel.

